


# Dipit Coil

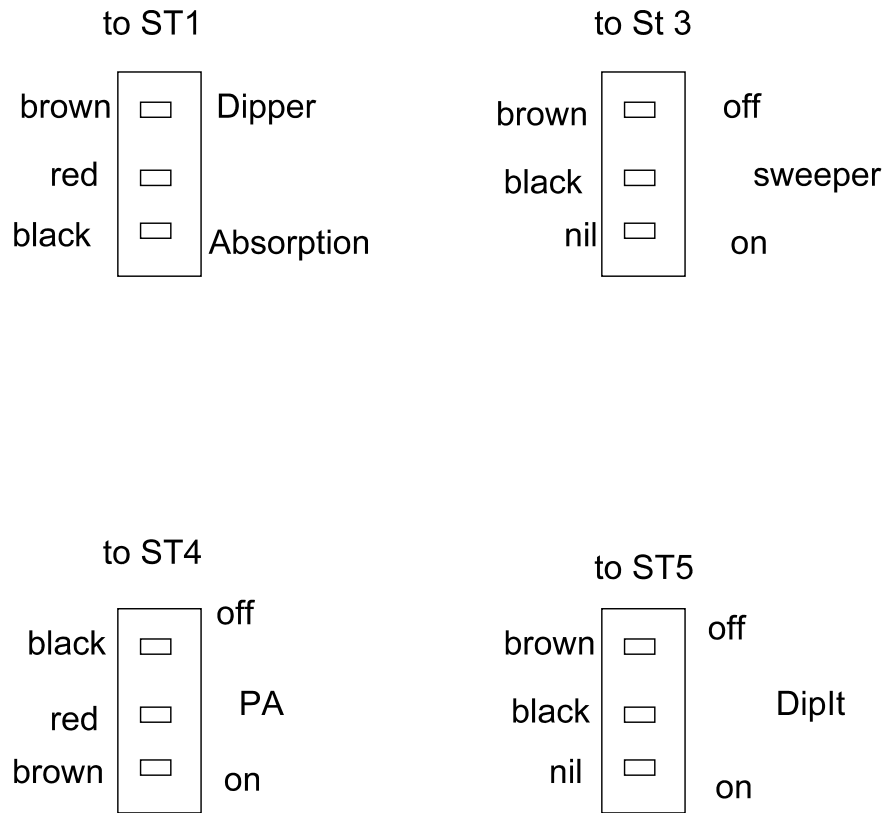

Switches seen from solder side

Shorten the cables and solder the colours as shown in the drawing

Attention: switches are sensitive against too much heat